# Desk Mount Rotary Panel RF Remote Controller

Model No.: RK1, RK2, RK3

Rotary dimming/1-3 color/Wireless remote 30m distance/CR2032 battery







RK 1 1 Zone Dimmina

RK2 1 Zone CCT

RK3 1 Zone RGB

CE RoHS and LVD RED

#### Features

- Apply to single color, dual color or RGB LED controller.
- Rotate knob to change RGB color, color temperature or brightness, support long press or twice click operation.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Desk mount, removeable anywhere easily.

## Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	< 5mA
Standby current	< 10µA
Standby time	l year
Remote distance	30m(Barrier-free space)

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

 
Safety and EMC		
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4	
Safety standard(LVD)	EN 62368-1:2020+A11:2020	
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	
Certification	CE,EMC,IVD,RED	

Warranty	
Warranty	5 years

Weight	
Net weight	61g
Gross weight	118g

# Mechanical Structures and Installations





Replace battery:



Use the controller's Match key

The LED indicator fast flash a few times

The LED indicator fast flash a few times

means all matched remotes were deleted.

means match is successful

Match:

Delete:



CR2032 Battery



please remove the protective film on the battery.

### Match Remote Control (two match ways)

Short press match key, immediately push the knob.

Press and hold match key for 5s to delete all match.

End user can choose the suitable match/delete ways. Two options are offered for selection:


## Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately push the knob 3 times. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power, repeat again. Immediately push the knob 5 times. The light blinks 5 times means all matched remotes were deleted.

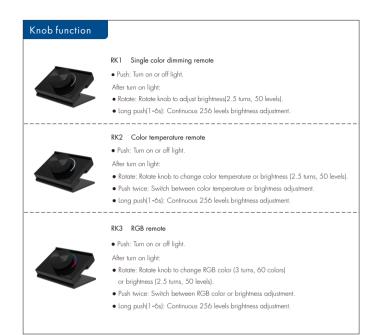

### Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.